



Installation:

1. With the Telco access cover open snap the module into the NID sliding the right side under the latch and rocking the left side into the latched position.
2. Open the cover to disconnect the network input and access the distribution connectors.
3. Route the network leads to the Telco access compartment and terminate as suggested by the NID manufacturer.
4. Terminate voice runs to the distribution connectors as described below.
5. Terminate the data run to the distribution connector as described below.
6. Close the cover to complete the circuit from the network input to the distribution connectors.

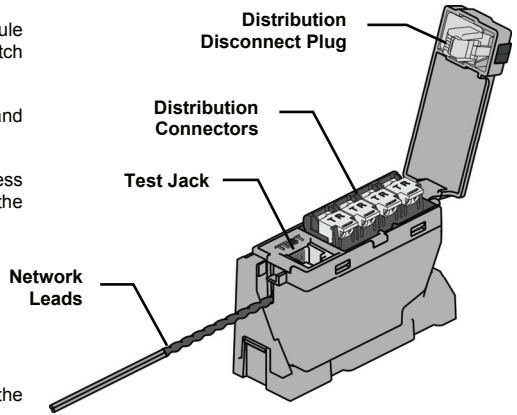


Distribution Connectors:

- A. Lift the toggle to the open position
- B. Insert **unstripped** wires into the corresponding wire holes
- C. While holding the wires firmly in place push down on the toggle, until it bottoms, terminating the wires.

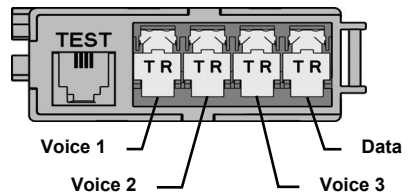

Testing:

1. Open the cover to disconnect the network input.
2. Plug tester into the test jack.
 - A. The center pair of the test jack will verify the incoming service line
 - B. The outer pair of the test jack will verify distribution connections

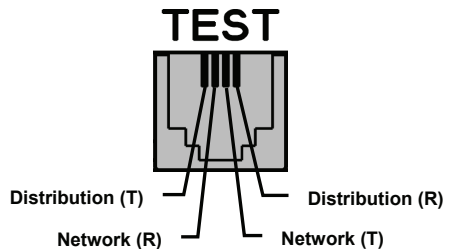

Important Information:

- Read and understand all instructions. Follow all warnings and instructions marked on the product.
- Do not use this product near water,--e.g., near a bath tub, wash basin, kitchen sink, wet basement, or near a swimming pool.
- Never push objects of any kind into this product through openings, as they may contact dangerous voltages.
- SAVE THESE INSTRUCTIONS.

Safety Information:

- Never install communications wiring or components during a lightning storm.
- Never touch uninsulated wires or terminals unless the wiring has been disconnected at the network interface.
- Never install communications components in wet locations unless the components are designed specifically for use in wet locations.